



Wi-Fi - Radiant Heater



**Model(s):PVIL1200BLK
PVIL1800BLK
PVIL2400BLK
PVIL3000BLK**



BEFORE THE FIRST USE

Read and follow all of the instructions in this manual and store it in a safe place for future reference.

For your convenience record the model number and the purchase receipt in a safe place.

NOTE: When the heater is first used you may detect an odor. This is because the protective layers of oil that the devices elements are coated in during production will burn off in first use. This should not cause concern and you should allow the appliance to heat up in an open environment to make the smell disappear.

IMPORTANT SAFEGUARDS

When using any electrical product the following basic safety precautions should always be followed, to reduce the risk of fire, electrical shock or injury to persons or property:

- Use only the voltage specified on the rating plate of the heater.
- Do not cover the grilles or block entry or exit of airflow by placing appliance against any surface. Keep all objects at least 1 metre from the front, side and rear of appliance.
- Do not place the product close to a radiant heat source.
- Do not use in areas where gasoline, paint or other flammable liquids are used or stored.
- To avoid burns, when the heater is in use do not allow bare skin to come in contact with it. Always ensure the heater is switched off and cool before transporting.
- Do not immerse the heater in liquid or allow liquid to enter the interior of the heater, as this could cause an electric shock.
- Do not operate the appliance if the cord or plug are damaged, or if the appliance malfunctions or has been dropped or damaged in any manner. Seek assistance from a qualified electrician for any mechanical adjustments, service or repairs.
- Do not touch the appliance with wet hands.
- The most common cause of overheating is deposits of dust or fluff in the heater. Ensure these deposits are removed regularly by unplugging the heater and vacuum cleaning air vents and grilles.
- Do not use this product near a window because rain may cause electric shock.
- Use a soft damp cloth to clean the appliance. Ensure that it is switched off and disconnected from the mains before hand.
- Do not connect the appliance to the mains voltage until it is fully installed in the desired position.
- Do not use the appliance in the immediate surroundings of a bath/shower, swimming pool or any liquid container.

- Switch off and let the surface cool before moving.
- We do not recommend use of an extension lead to operate this appliance.
- Please ensure that the power supply is switched off when the appliance is not in use.
- Do not allow the cord to come into contact with the heated surface during operation.
- CAUTION: this heater is not suitable to be used on long pile carpets or flokati rugs.
- Do not run the cord in areas where it can cause someone to trip or fall.
- Do not twist, kink or warp the cord around the heater, as this may cause the insulation to waken and split. Always ensure that cord has been removed from any cord storage area.
- Do not store heater while it is still hot.
- This appliance is not to be used by young children without supervision.
- Do not locate this appliance below the socket-outlet.
- All covers of this appliance are intended to protect direct access to the heating elements and must be in place when the appliance is in operation.
- Please only use this product as per its intended use outlined in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- This appliance can be used by children aged 8 years and above. It should only be used by persons with reduced physical, sensory or mental capabilities if they have been given supervision or instruction concerning safe use of the appliance and understand associated potential hazards. Children should not play with the appliance. Cleaning and maintenance should not be carried out by children without supervision.
- Children of less than 3 years should be kept away from the appliance unless continuously supervised. Children aged between 3 and 8 should only switch the appliance on or off if it has been placed or installed in its normal operating position and they have been given supervision or instruction concerning safe use of the appliance and understand associated potential hazards. Children aged 3-8 should not plug in, clean or perform user maintenance on the appliance at any time.
- CAUTION-Some parts of this prouduct can become very hot and cause burns.Particular attention has to be given where children and vulnerable people are present.
- When installing the heater, please ensure that it is at least 1.8m above floor level.
- If the supply cord is damaged it must be replaced by a qualified electrician to avoid a hazard.
- WARINING: This heater is not equipped with a device to control the room temperatrure.Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own,unless constant supervision is provided.

 
PRODUCT INSTRUCTION




PRODUCT SIZE

Model	Power	Length (mm)	Wide (mm)	High (mm)
PVIL1200BLK	1200W	940	150	65
PVIL1800BLK	1800W	1240	150	65
PVIL2400BLK	2400W	1540	150	65
PVIL3000BLK	3000W	1840	150	65

CIRCUIT DIAGRAM

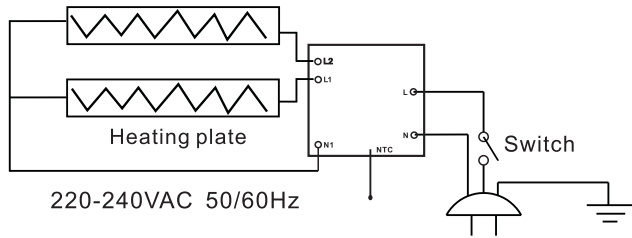

PRODUCT CONTROL PANEL

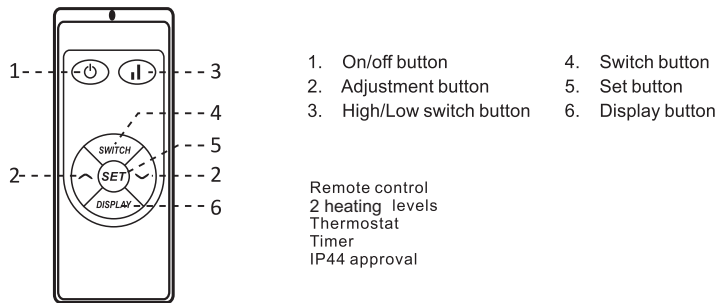 

OPERATION GUIDE


Please read the operating instructions before first use.

Take out the heater from the carton carefully. Please save the carton for storage purposes.



Firmly fix the heater in the desired position by following the installation instructions.

Do not plug other high-power appliances in the same socket as the heater to avoid overloading.



Switch On

1. Press “” to turn the heater on and the screen will display the room temperature. If the current room temperature is lower than the pre-set temperature the heating function will begin to operate, and the indicator light will blink.




Lock Function

2. Press “” followed by “” and the “LOCK” indicator light will illuminate. All keys are invalid when the lock function is activated.






Display screen On/Off

3. Press “” to switch off the display.
Press the “” button again for the display to illuminate.

Temperature Setting

4. To set the temperature press “” then press “” or “” to increase or decrease the temperature by 1°C. The maximum temperature is 45°C. Once the desired temperature is set the system will automatically update and return to its normal operational status where the screen displays the room temperature.




Timing switch setting

5. Press “” and the “00” will flash, use “” and “” to set the time. The minimum time set up is 1 hour and the maximum is 24 hours. Each time you press “” or “” the time will increase or decrease by 1 hour. When the time is set the system will automatically save and return to its normal operating status, however, it will now display the time on the screen.

Open the window to detect

6. When the temperature reduces by 3°C or more within two minutes, the intelligent window detection function kicks in and the heater will stop working. The LED display will flash and the heater will make a clicking sound. The heater will only resume working when it is manually reset by hand.


Wi-Fi reset setting (with Wi-Fi model)

7. When the heater is in operation press “” followed by “” within 5 seconds. Then hold “” for around 10 seconds and the Wi-Fi will reset.

High/Low setting

8. When the heater is in operation press “” to switch between the high and low heating setting.

Switch Off

9. Press “” to turn the device off.

WARNING

This heater is hot when in use. To avoid burns, do not let bare skin touch any hot surfaces.

SERVICE

When a service is required contact a qualified service centre.

 
REPLACEMENT OF POWER CORD

If the power cord is damaged it must be replaced by a service agent or equivalent persons in order to prevent a hazard.


CHILD SUPERVISION

This appliance is not intended to be use by children or infirm persons without supervision.


INSTALLATION GUIDE

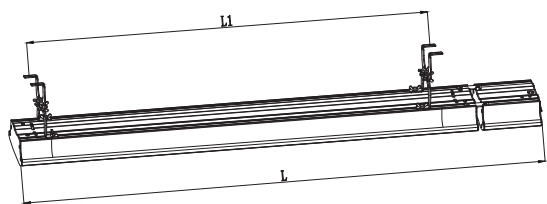


Model	L(mm)	L1(mm)
PVIL1200BLK	940	707
PVIL1800BLK	1240	1007
PVIL2400BLK	1540	1307
PVIL3000BLK	1840	1607

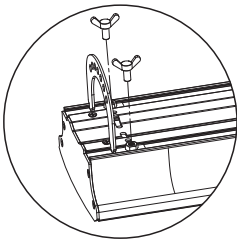 

A

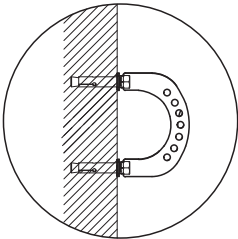 


B

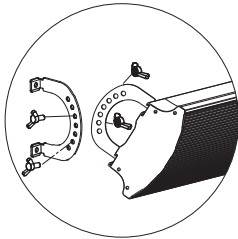 


C

 
Step one: use the screws to install two of the fixed frames to the device, as shown in figure A.
Step two: use the screws to install the fixed frames to the wall or ceiling, as shown in figure B.
Step three: affix the device to the chosen area with screws, as shown in figure C.

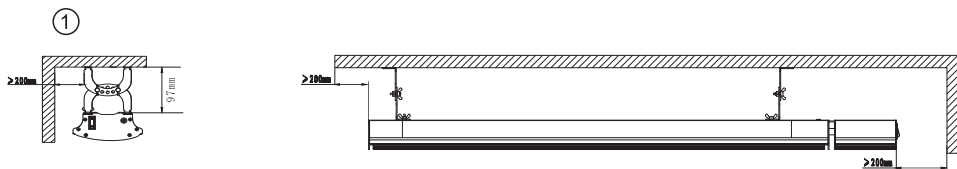

 
Ceiling installation: the device must be installed at least 200mm from the wall, as shown in figure 1.

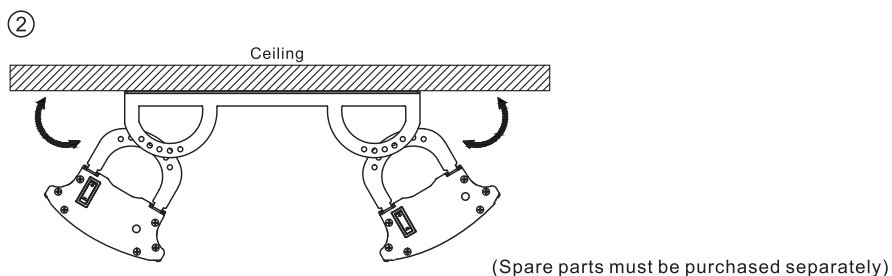

 
Double hanging ceiling installation: two electrical appliances are connected through a connecting frame installed on the ceiling, as shown in Figure 2.

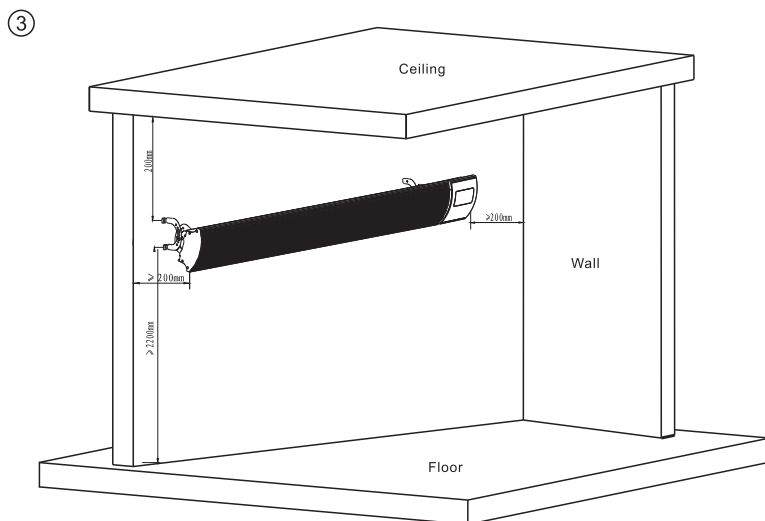

 If the appliance is to be wall mounted it must be at least 2200mm from both the ground and ceiling, as shown in figure 3.


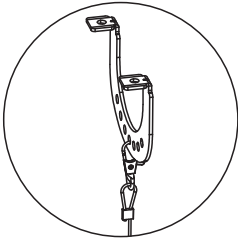


a1

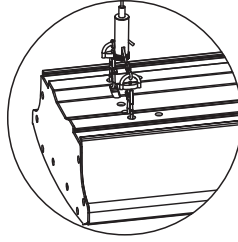 

b1

  ④

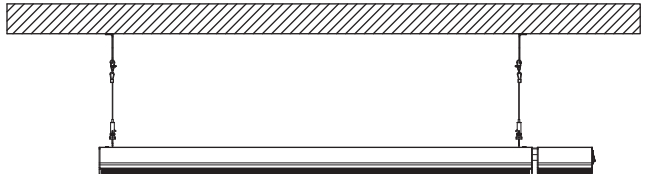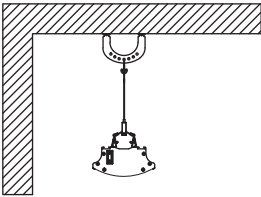

(Spare parts must be purchased separately)

Extended installation: sling appliances will hook up and hang from the ceiling, as shown in Figure 4

 
1. Download APP

 
Scan the QR code below for a simple download using your smart device.
Alternatively, search 'Smart Life' on your device application store to download.



2. APP Operation

1. Download the Smart Life App.
2. Enter the interface .
3. Click the + icon in the upper right-hand corner or alternatively press Add Device.
4. Go to Small Home Appliances and select Heater.
5. Enter the corresponding password to the chosen Wi-Fi network account.
6. Click the link indicator on the infrared device's digital screen. If the indicator is not blinking reset the Wi-Fi (see point 7 of Operation Guide for reference).
7. Set the device information and press Done to enter the control interface where you will now be able to control the heater.

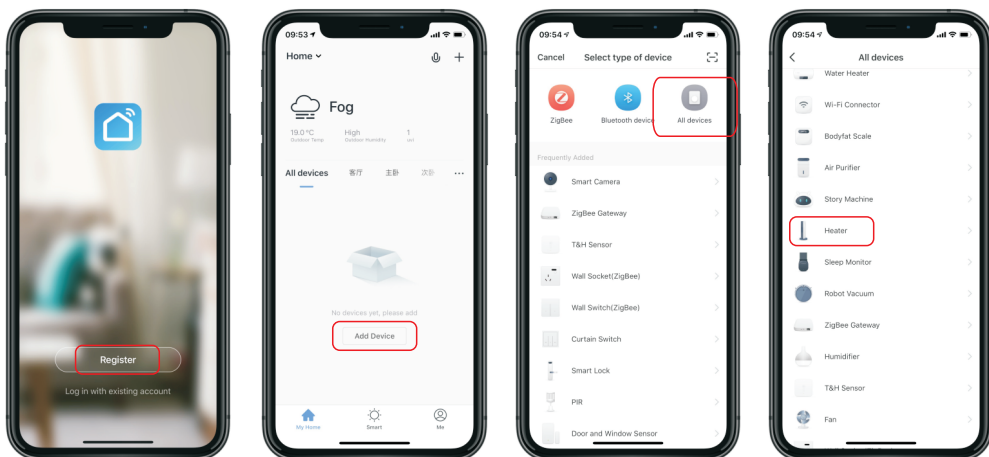

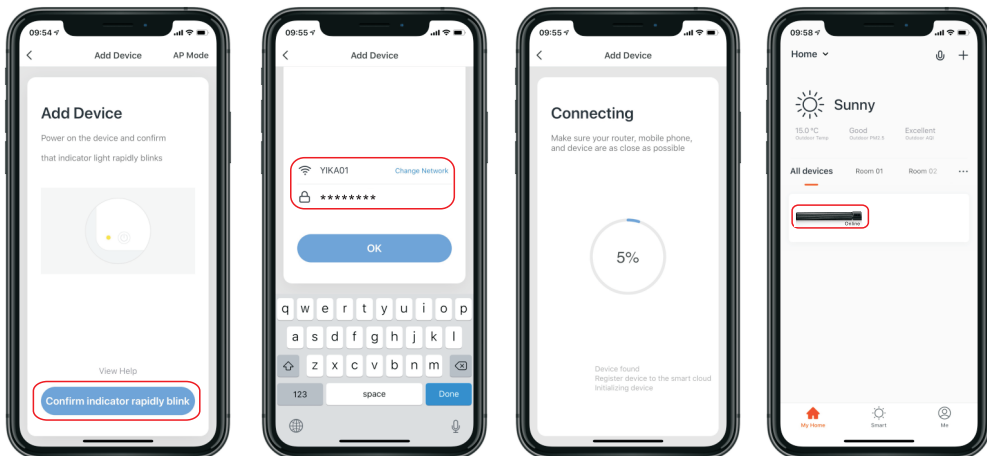

Note: Due to continued updates, the images in this manual may vary slightly from the latest procedure. All images in this manual are for reference purposes only.

WARNING

1. Please ensure the heater is fixed correctly to the wall.
2. Heater is to be installed so that it is not located directly under a socket-outlet.
3. Consult a qualified electrician or service technician if the power cord is damaged.
4. Always store the heater in a safe place when not in use for long periods of time. Ensure it is in protective packaging to avoid damage whilst stored.
5. Make sure the heater has cooled down before storing.
6. Ensure the heater is kept at a safe distance from other furniture or appliances to avoid a hazard.

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal free of charge.



Table for information requirements for electric local space heaters

Model identifier(s):		PVIL1200BLK	PVIL1800BLK	PVIL2400BLK	PVIL3000BLK	
Item	Symbol	Value				Unit
Heat output						
Nominal heat output	P _{nom}	1.2	1.8	2.4	3.0	kW
Minimum heat output (indicative)	P _{min}	0.6	0.9	1.1	1.4	kW
Maximum continuous heat output	P _{max}	1.1	1.8	2.3	2.8	kW
Auxiliary electricity consumption						
At nominal heat output	e _{lmax}	1.137	1.760	2.283	2.768	kW
At minimum heat output	e _{lmin}	0.576	0.878	1.125	1.415	kW
In standby mode	e _{lSB}	0.3	0.4	0.17	0.3	W
Item						Unit
Type of heat input, for electric local space heaters only (select one)						
Manual heat charge control with integrated thermostat						[no]
Manual heat charge control with room and/or outdoor temperature feedback						[no]
Electronic heat charge control with room and/or outdoor temperature feedback						[no]
Fan assisted heat output						[no]
Type of heat output/room temperature control (select one)						
Single stage heat output and no room temperature control						[no]
Two or more manual stages, no room temperature control						[no]
With mechanic thermostat room temperature control						[no]
With electronic room temperature control						[no]
Electronic room temperature control plus day timer						[yes]
Electronic room temperature control plus week timer						[no]
Other control options (multiple selections possible)						
Room temperature control, with presence detection						[no]
Room temperature control, with open window detection						[yes]
With distance control option						[yes]
With adaptive start control						[no]
With working time limitation						[no]
With black bulb sensor						[yes]
Contact details:						
<p>Remark:</p> <p>For electric local space heaters, the measured seasonal space heating energy efficiency η_s cannot be worse than the declared value at the nominal heat output of the unit.</p>						



PROVIDA VARME

Narverødveien 40, 3113 Tønsberg
Tlf: 92 49 40 78

E-post: info@providavarme.no

Web: www.providavarme.no

Nettbutikk: www.providavarmeshop.no